


# 5 Star Firearms Tactical Pouch Guide:

## Assembly Process:

1. Insert spacer tubes between the flanges of the holster.
2. Insert bolts through spacer tubes, screw into self forming thread bosses. Do not over tighten.

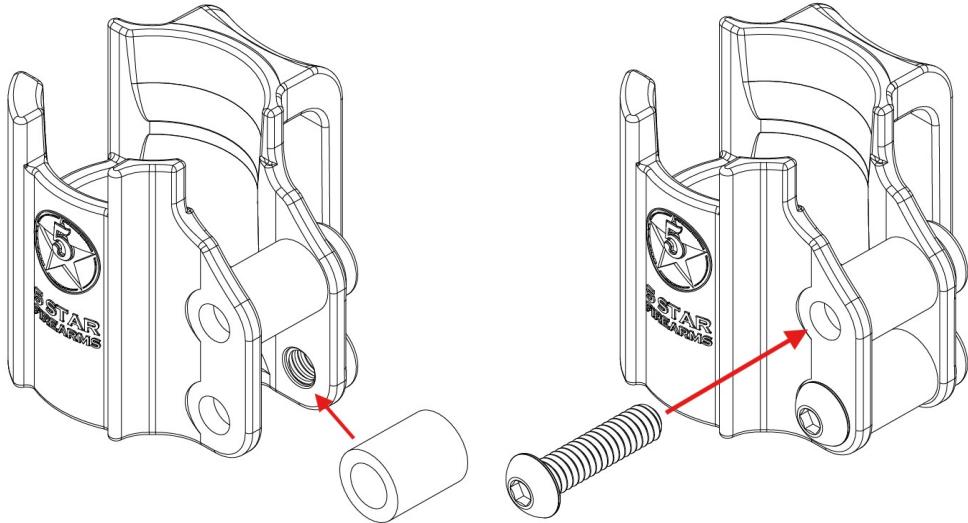

## Adjustment:

The top bolt controls how tightly the speed loader is retained. The lower bolt controls the "feel" of the holster. Tightening the lower bolt will open the mouth of the holster making it easier to draw and stow your Speed Loader at the cost of retention.

